

## **AXIS C8310 Volume Controller**

**User manual**

# AXIS C8310 Volume Controller

## Table of Contents

---

Installation .....	3
Get started .....	5
Use AXIS C8310 Volume Controller with AXIS Audio Manager Edge .....	5
Use AXIS C8310 Volume Controller with AXIS Audio Manager Pro .....	5
Specifications .....	6
Product overview .....	6
Contact support .....	7

# AXIS C8310 Volume Controller

## Installation

---

### Installation




To watch this video, go to the web version of this document.

*[help.axis.com/?&pid=89788&section=install](http://help.axis.com/?&pid=89788&section=install)*

Connect your AXIS C8310 Volume Controller to the I/O connector of any device in your system. We recommend that you simply choose the device that is located closest to your AXIS C8310 Volume Controller.

#### Note

The host device must have firmware version 11.6 or later.

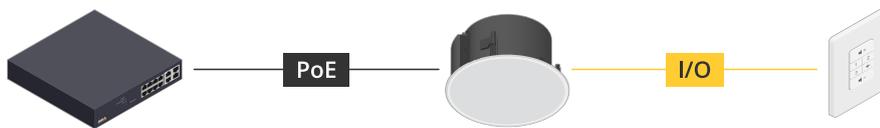


*Example: AXIS C8310 Volume Controller connected to a host device, which in turn is connected to the network.*


# AXIS C8310 Volume Controller

## Installation

---

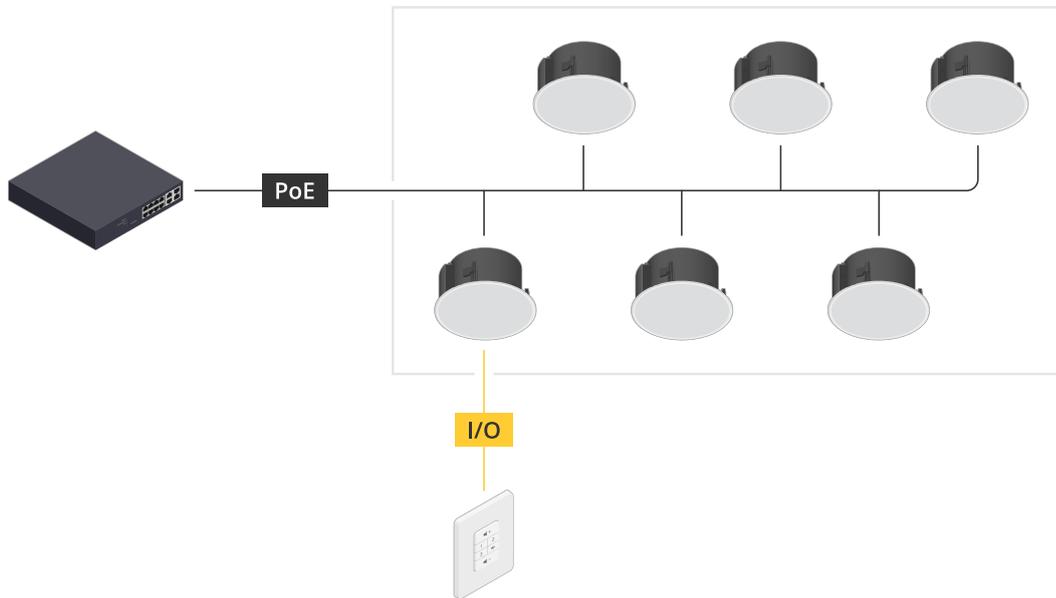

*Example: AXIS C8310 Volume Controller connected to a host device, which in turn is connected to the network. The host device belongs to a physical zone.*

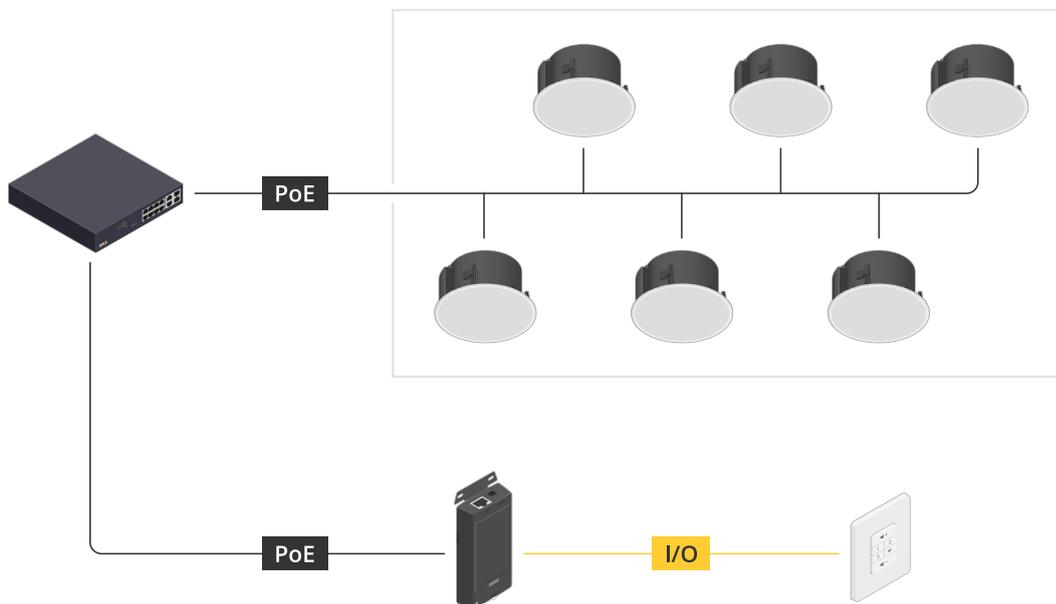

*Example: AXIS C8310 Volume Controller connected to a host device, which in turn is connected to the network. The system contains multiple speakers in a physical zone, but the host device does not belong to any physical zone.*

# AXIS C8310 Volume Controller

## Get started

---

### Get started

#### Use AXIS C8310 Volume Controller with AXIS Audio Manager Edge

1. Open the device interface for the host device by entering its IP address in a web browser.
2. Go to **Audio > Overview**.
3. Click **Launch AXIS Audio Manager Edge**.
4. For further instructions, visit *Control audio with AXIS C8310 Volume Controller* in the AXIS Audio Manager Edge user manual.

#### Use AXIS C8310 Volume Controller with AXIS Audio Manager Pro

You need to have AXIS Audio Manager Pro version 4.4 to use it with an AXIS C8310 Volume Controller.

For instructions, visit *Control audio with AXIS C8310 Volume Controller* in the AXIS Audio Manager Pro user manual.


# AXIS C8310 Volume Controller

## Specifications

---

### Specifications

#### Product overview

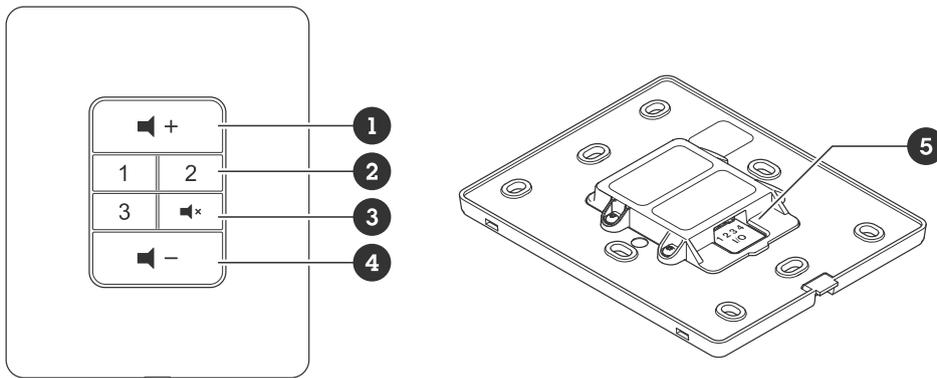

- 1 Increase volume
- 2 Source buttons
- 3 Mute and unmute audio
- 4 Decrease volume
- 5 I/O connector

# AXIS C8310 Volume Controller

## Contact support

---

### Contact support

Contact support at [axis.com/support](https://axis.com/support).

